

Packing List

In addition to this guide, the package includes the following items:




MDCL-705i



RS-232 Cable
(CA-0910)



Screw Driver
2.4 mm

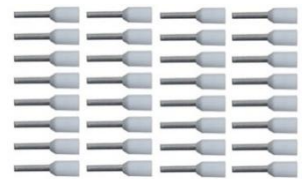

Wire Terminal
x 32

Technical Support


service@icpdas.com

www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

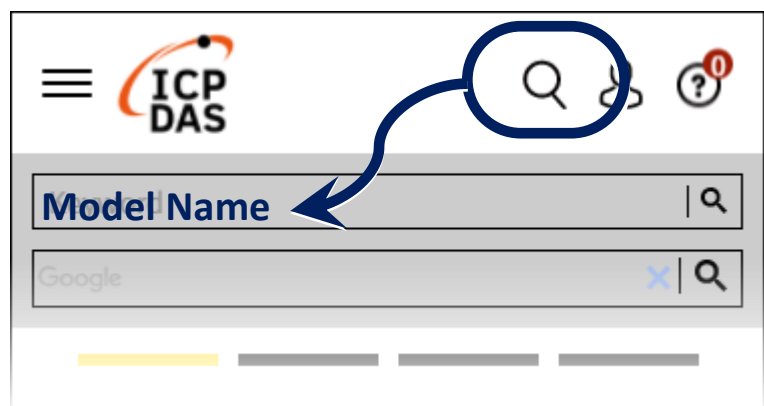


- For Desktop Web



1 Connecting to PC, Network and Power

Step1. Connect the power supply. (+10 ~ +48 VDC).

Step2. Connect the MDCL-705i and PC to the same switch in the LAN

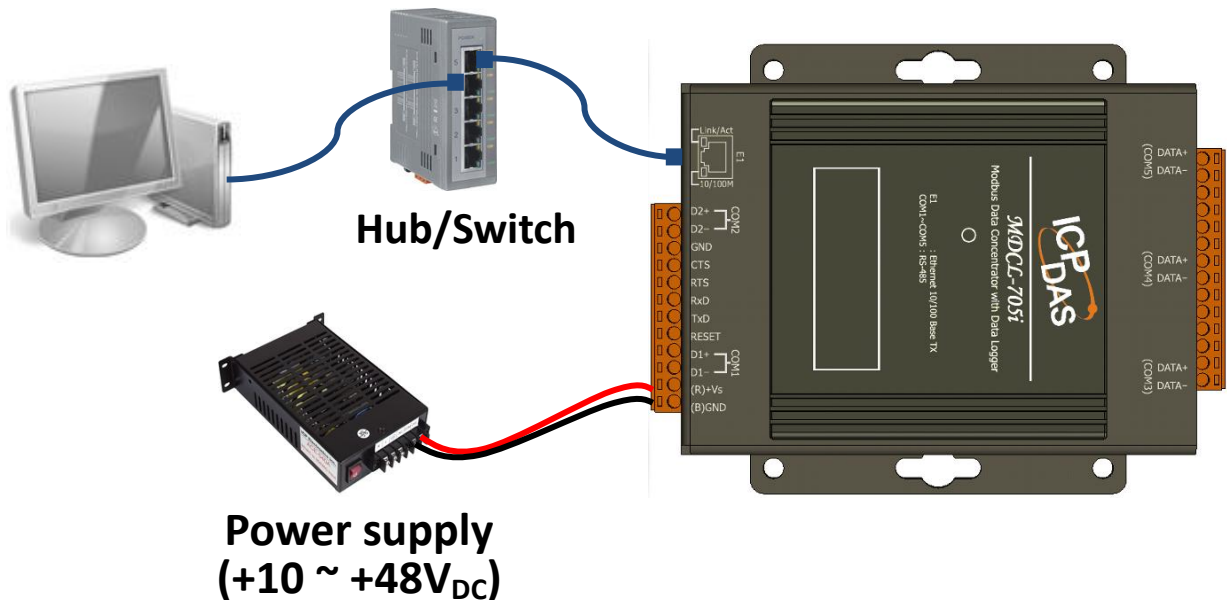

2 Creating User Account

Before starting this configuration, the MDCL-705i needs to be connected to your network and powered on. Note down the IP address of your computer for restoring it later.

The factory default settings:

Item	Default
IP Address	192.168.255.1
Subnet Mask	255.255.0.0
Gateway	192.168.0.1

Step1. Assign an IP address in the range of 192.168.255.2 to 192.168.255.253 to your computer.

NOTE: Details on how to change the IP address on your computer depend upon the type architecture and operating system you are using. Use the computer Help and Support functionality to search for “IP Addressing”.

Step2. Enter the default IP address of the MDCL-705i (http://192.168.255.1) into your browser's address bar and press “Enter”.

Step3. Create your account (for the first time login)
User name and password must be at least four characters.
(A-Z, a-z, 0-9, case-sensitive and “.”, “-”, “_”, “@”symbols)

Create Your Account

To log in for the first time you will need to create an administrator account.

USERNAME

PASSWORD

CONFIRM PASSWORD

CREATE ACCOUNT

MDC-705i-DL Ver 1.00.001

1. Enter your user name (> 4 characters)
2. Enter your password
3. Enter your password again
4. Click **CREATE ACCOUNT**

Step4. Log in to the MDCL-705i

Account Created

Use your username and password to access your administrator account.

USERNAME

PASSWORD


LOGIN

MDC-705i-DL Ver 1.00.001


1. Enter your user name
2. Enter your password
3. Click **LOGIN**

3 Assigning an IP Address

Step1. Select the “NETWORK SETTINGS” tab on the “GENERAL SETTINGS” page, enter valid IP, Subnet Mask and Gateway addresses, and then click the “SAVE” button.

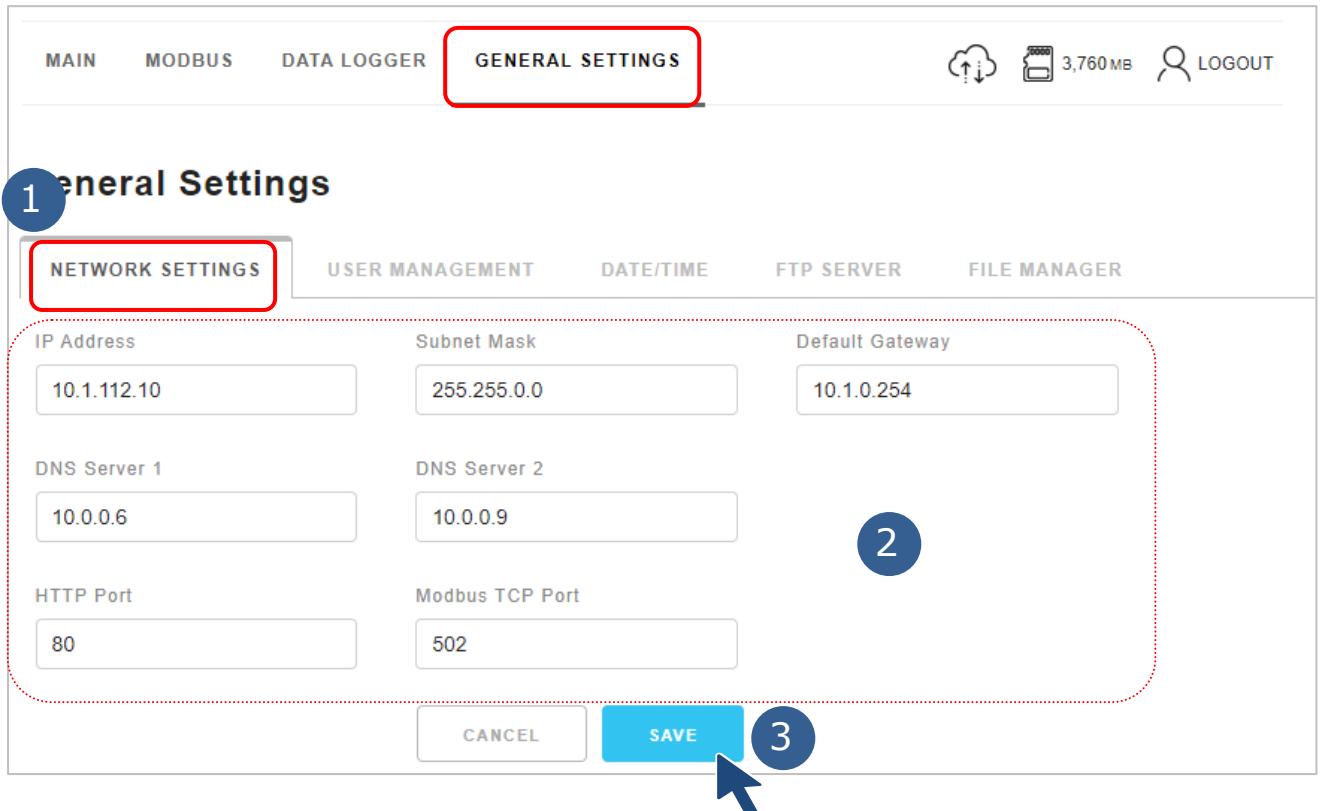

Step2. Click “Restart Now”.

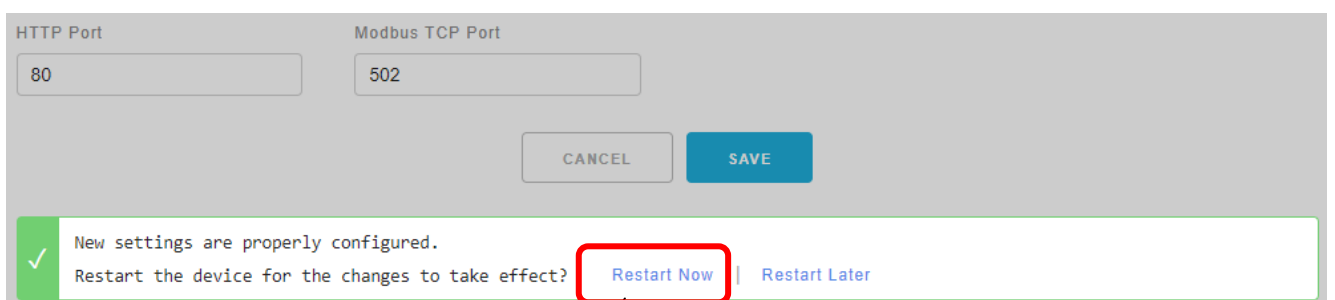

Click “Restart Now”

Step3. Restore the IP of the computer, enter new IP address of the MDCL-705i into the browser and press “Enter”. Now you can start to configure more basic settings on the web interface.